

## **AVHub Installation**


## **Package Contents**

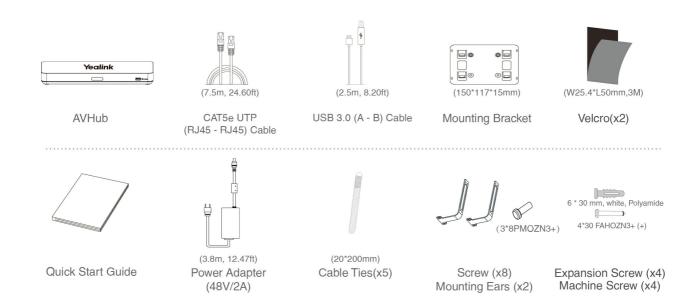


### Installation

#### **Mount on the Wall**

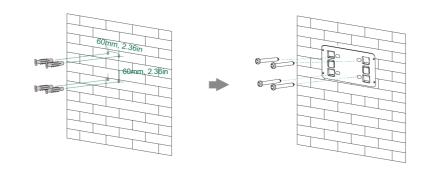


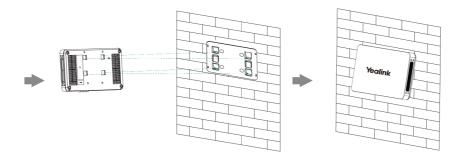

#### Stick under the Table

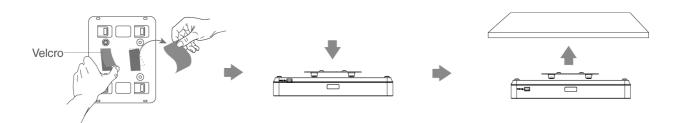

#### Put on the Desk

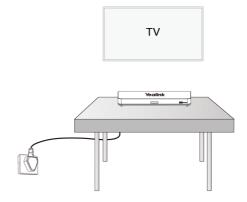


#### **Mount on the Rack**

1. Install the mounting ears on both sides of the AVHub.



2. Push the AVHub into the rack, and then fix it to the rack with screws.

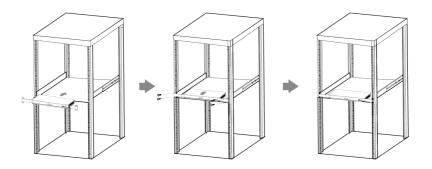


#### (i) NOTE

Yealink

- The rack in which the AVHub will be placed must be a 19-inch Rack compliant with IEC 60297.
- The Package Contents do not include screws.

#### Connection

If connecting the UVC84/UVC86 directly to the AVHub, ensure the total connections do not exceed 2 UVC86 or 4 UVC84. If the connections exceed these limits, a PoE switch compliant with the 802.3 AT (PoE+) standard is required.

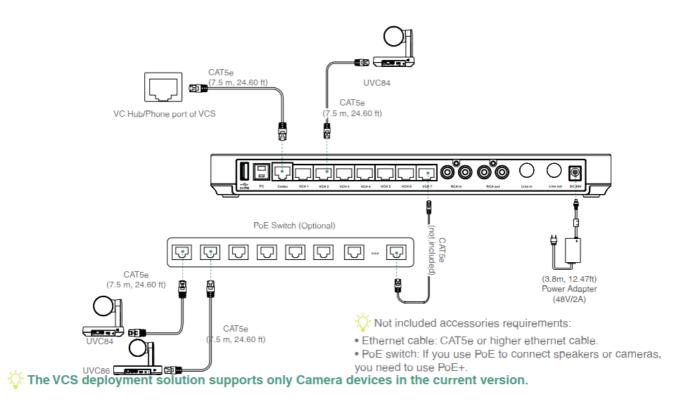

# Yealink

## (i) NOTE

Requirements for not included accessories:

- Ethernet cable: CAT5e or higher ethernet cable.
- PoE switch: If you use PoE to connect speakers or cameras, you must use PoE+.

## **Hardware Interface**

Please refer to MVC Hardware Overview - AVHub for details.