

Quick Setup

Obtain Device IP Address


Method 1: Through the MGMT interface

Connect the MGMT interface of the CT200/CT300 to the computer via USB cable, and access the page <https://192.168.62.8> in the browser to view the IP address of the device's LAN port.





Method 2: Use the Room Designer to Find

Connect LAN1 to the computer running Room Designer software via a network cable; Room Designer can detect CT200/CT300 and view the device's IP (<https://IP address>).

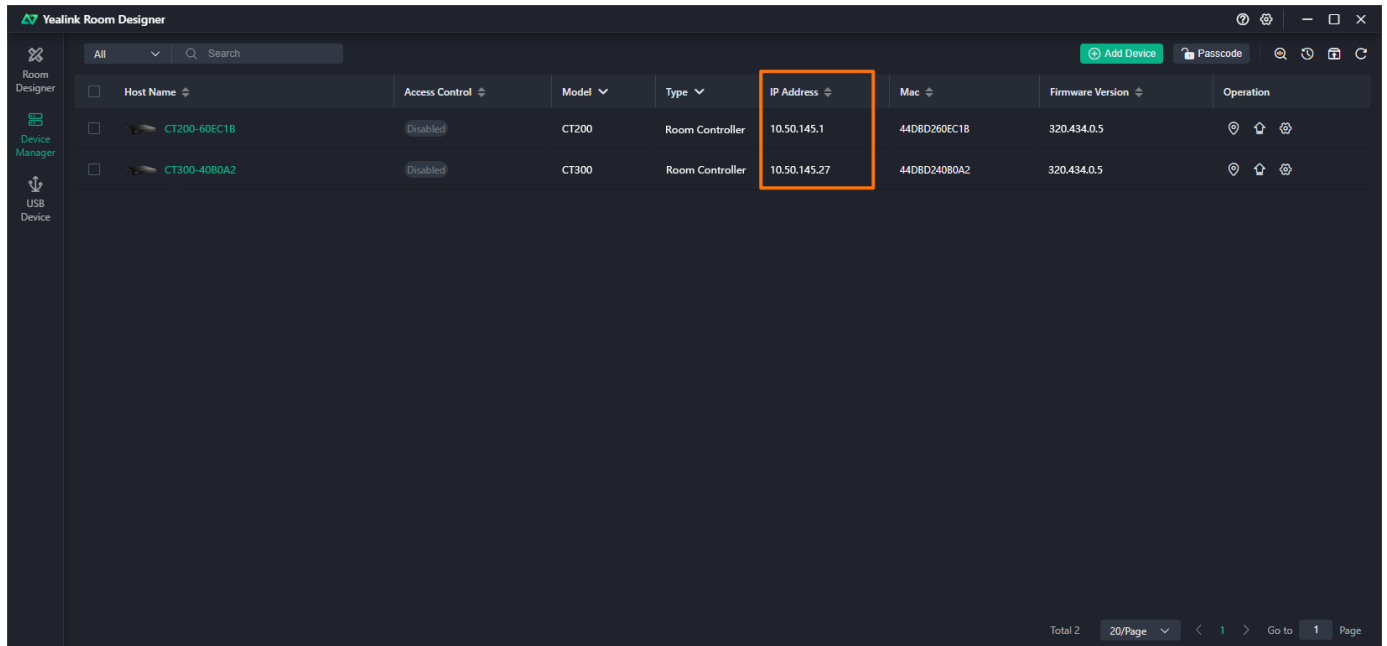

Method 3: Switch the LAN Port from DHCP Mode to Static IP Mode

Quickly press the LAN button on the front panel of the device 3 times to switch the network mode to static IP mode (the LAN light flashes blue), LAN1 port IP: <https://192.168.61.11>, LAN2 port IP: <https://192.168.61.12>.

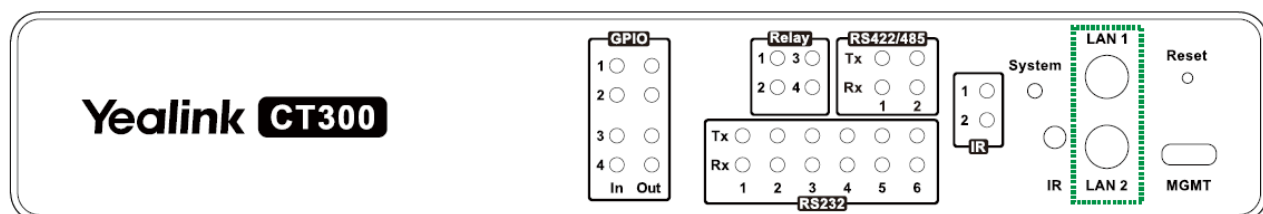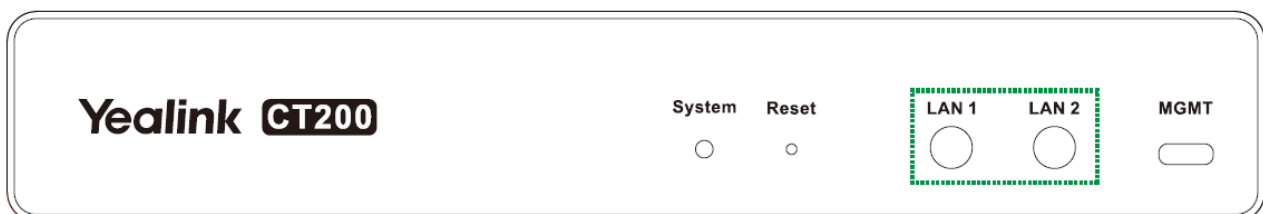

Sign in the Web User Interface

Set Password

Enter the device's IP address in the browser to log into the device interface. On the first login page, you need to manually set the password.

**Password requirements:**

- Length at least 8 characters.
- Numbers, uppercase and lowercase letters, and special characters (:~!@#\$%^&* () - _+=\| [0];: ",<, > / ?) must include at least three types.
- Cannot be the same as the account (default account is admin).

Login

Enter the account (default account is admin) and password to log into the web interface.



Yealink

Copyright © 2025 Yealink Inc. All rights reserved.

