
Yealink

CP Wireless Microphones

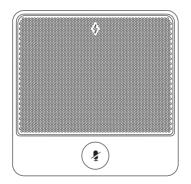

Quick Start Guide (V1.4)

Package Contents

The following items are included in your package. If you find anything missing, contact your system administrator.













Charging Cradle

CPW90 Wireless Micx2


DD10 USB Donale

Micro USB Cable

Power Adapter

Quick Start Guide

Component Instruction

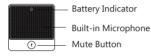






Charging Slot

Charging the Wireless Microphones

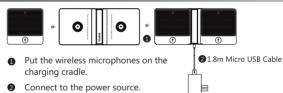

During charging, the battery indicator glows red. When the battery capacity reaches 100%, the battery indicator glows green.

When you charge the wireless microphones, the wireless microphones will start automatically. You can also long tap the mute button on the wireless microphone for 3 seconds to turn it on.

Note: If it is the first time you use the wireless microphones, you need to fully charge them.

If the wireless microphones are not in use, we still recommend you to charge them even when the battery is full.

Pairing with the Video Conferencing System

If you purchase video conferencing system and wireless microphones together, they are already paired. Just turn the wireless microphones on to use them. Make sure a DD10 USB dongle is connected before you use the wireless microphones.

If you purchase wireless microphones separately, you need to pair them with video conferencing system manually.

To pair wireless microphones with video conferencing system:

- On your remote control, navigate to More->Setting->Video & Audio->Wireless Microphone.
- Select Add Wireless Microphone.
- 3. Place the wireless microphones on the charger and long press the mute button for 5 seconds until the mute LED indicator fast flashes vellow. The wireless microphones are paired with the video conferencing system.

Unbinding the Paired Wireless Microphones

If you want to pair new wireless microphones with your video conferencing system, you need to unbind old microphones.

- On your remote control, navigate to More->Setting->Video & Audio->Wireless Microphone.
- Select the desired wireless microphone and press the OK key.
- Select Unbind.

The screen prompts "Unbind device?"

4 Select OK

Finding the Paired Wireless Microphones

- 1. On your remote control, navigate to More->Setting->Video & Audio->Wireless Microphone.
- 2. Select the desired wireless microphone and press the OK key.
- Select Find.

The mute LED indicator flashes red and green alternately.

4 Select Cancel

Muting or Unmuting the Wireless Microphones

1. Tap the mute button to mute it.

The mute LED indicator glows red.

2. Tap the mute button again to unmute it.

Regulatory Notices

Operating Ambient Temperatures Operating temperature: +32 to 104°F (0 to 40°C)

- Relative humidity: 5% to 90% nonconden
- Storage temperature: -22 to +160°F (-30 to +70°C)

Our product warranty is limited only to the unit itself, when used normally in aclance with the operating instructions and the system environment. We are no liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product

Explanation of the symbols

- DC symbol - is the DC voltage symbol
- WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should under stand the meaning of the crossed-out wheeled bin symbol. Do not dispose of

WEEE as unsorted municipal waste and have to collect such WEEE separately. Restriction of Hazardous Substances Directive (RoHS) This desire complies with the requirements of the ELL BoldS Directive Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions Save these instructions. Read these safety instructions before usel

▲ General Requirements

Before you install and use the device, read the safety instructions carefully and observe the situation during operation

- During the process of storage, transportation, and operation, please always
- keep the device dry and clean, avoid collision and crash Please attempt not to dismantle the device by yourself. In case of any dis
- crepancy, please contact the appointed maintena nce center for repai · Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well
- ▲ Environmental Requirements · Place the device at a well-ventilated place. Do not expose the device under direct sunlight
 - · Keep the device dry and free of dusts Do not place the device on or near any inflammable or fire-vulnerable öb
 - iect, such as rubber-made materials. · Keep the device away from any heat source or bare fire, such as a candle or an electric heater

⚠ Operating Requirements

- Do not let a child operate the device without guidance
- Do not let a child play with the device or any accessory in case of acciden tal swallowing
- Please use the accessories provided or authorized by the manufactures
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket
- · Before plugging or unplugging any cable, make sure that your hands are completely do
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike
- . If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug. When there is smoke emitted from the device, or some abnormal noise or
- smell, disconnect the device from the power supply, and unplug the power plug immediately.
- · Contact the specified maintenance center for repair · Do not insert any object into equipment slots that is not part of the prod
- uct or auxiliary product
- · Before connecting a cable, connect the grounding cable of the device first.

About Yealink

Yealink is a global leading provider of enterprise communication and collaboration solutions, offering video conferencing service to worldwide enterprises. Focusing on research and development, Yealink also insists on innovation and creation. With the outstanding technical patents of cloud computing, audio, video and image processing technology, Yealink has built up a panoramic collaboration solution of audio and video conferencing by merging its cloud services with a series of endpoints products. As one of the best providers in more than 140 countries and regions including the US, the UK and Australia, Yealink ranks No.1 in the global market share of SIP phones shipments.

Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues.



Do not disconnect the grounding cable until you disconnect all other cable

A Battery Requirements

Do not immerse the battery into water which could short-circuit and dar

- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the bat tery to explode
- Do nower the handset off before removing the battery Do not try to use the battery for the power supply of any device other than
- Do not open or mutilate the battery released electrolyte is corrosive and
- may cause damage to your eyes or skir Use only the rechargeable battery pack delivered with the handset or those
- rechargeable battery packs expressly recommended by Yealink Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or

a designated collection facility ↑ Cleaning Requirements Before cleaning the device, disconnect it from the power supply.

- Use a piece of soft, dry and anti-static cloth to clean the device. Keep the power plug clean and dry Troubleshooting
- The unit cannot supply power to Yeslink device There is a bad connection with the plug.
- Clean the plug with a dry cloth Connect it to another wall outlet
- The usage environment is out of operating temperature range Use in the operating temperature rang The cable between the unit and the Yealink device is connected incorrectly
- 1 Connect the cable correctly. You cannot connect the cable properly
- 1. You may have connected a wrong Yealink device 2. Use the correct power supply
- Some dust, etc., may be in the port 1 Clean the port
- Contact your dealer or authorized service facility for any further questions
- FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the
- following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- IC Statement This device complies with Industry Canada's licence-exempt RSSs. Operation is
- subject to the following two conditions (1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause
- undesired operation of the device. CAN ICES-3(B) Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux ap pareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes
- (1) l'appareil ne doit pas produire de brouillage (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi même si le brouillage est susceptible d'en compromettre le fonctionnement
- Radiation Exposure Statement
- This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body
- Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre

Contact Information

- YEALINK NETWORK TECHNOLOGY CO. LTD.
- 309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R. YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.
- Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Nether
- YEALINK (USA) NETWORK TECHNOLOGY CO., LTD
- 999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

